

Disconnecting the battery ground.

- Remove the seat.
- Disconnect the battery ground (negative terminal).



Remove the fairing side panels.

- Remove the four marked hex screws with plastic washers. Note the positions the screws come from as they are not all the same.
- Note that the bottom, rear hex bolt has a retaining plastic washer **INSIDE** the fairing. The long bolt goes under the 'twin' label.



- Remove the hex screw indicated on the inside of the fairing panel.

- Remove the grey Phillip's head screw as indicated on the inside panel.



- Remove the plastic locking clip on the underside of the fairing behind the radiator.